



CR-135i



CR-190i


Prior to feeding the Cleaning Card, please make sure to disable the double-feed detection sensor. When running the Canon Scanning Utility, press the function (F) button and verify the blue light of the button is turned OFF. If the blue light is ON, the double-feed detection sensor is enabled. If not using the Scanning Utility, please consult with your software provider to disable the double-feed detection function.

OR

1 Turn OFF the scanner.


2 Disconnect the scanner and the computer.

3 Turn ON the scanner while pressing both the START and STOP button.

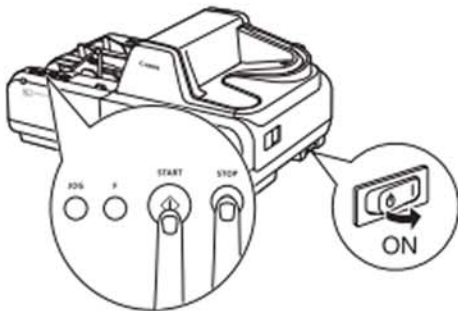

4 Press the "F" button to turn the blue light OFF and pull the Eject Stopper.

5 Place the cleaning card in the feed tray.

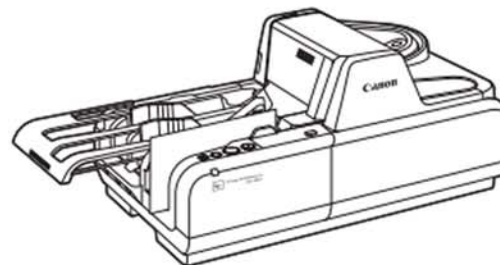

6 While pressing and holding the gray bypass button, press the START button to feed the cleaning cards.

7 Repeat steps 5 and 6 (3 - 5 times).

8 Upon completion, turn the scanner OFF and ON for normal scanning.

Note: Allow 1 to 2 minutes for the moisture on the Canon CR-Series scanner from the cleaning card to thoroughly dry before scanning documents.

*If the scanner turned ON properly, the power LED continues to flash.

For more information, please refer to page 21 of the Operation & Maintenance Guide.